## UNIVERSAL EUROPEAN TEMPERATURE RECORDER "OPEN PRO"

#### FOCUSED TO FLEET MANAGEMENT SYSTEM COMPANIES EASY INTEGRATION: "PLUG AND PLAY"



Technical support: (+44) 772 431 3334 help@universalrecorders.com





Temperature recorder **homologated EN12830 Class 0,5** Compliant for transportation, distribution, storage: **EN 12830 + EN13845 + EN 13486** Ministry of health (Spain): Sanidad/Farmacia/Alimentación: ICT 3701/2006 + ICT 155/2020

#### Features



Temperature sensor with 2 sensor, expandable up to 4 sensors Detachable temperature sensors **one-of-a-kind** Interchangeable sensors of easy installation, replacement and validation

Configuration/communication with temperature recorder by free App Printer optional/external Bluetooth printer Screen data by App in mobile





Fleet management systems connection: Serial port RS-232 Power: 12-24VDC

Inputs: Frigo on/off motor detection Working hours frigo motor detection Doors open detection 1 free use input and 2 outputs for control (lights, siren, on/





### Terms and conditions of guarantee

The complete terms of the guarantee of ANDRA SOLUTIONS are described below.

Through this Guarantee, ANDRA SOLUTIONS guarantees that the product is free from defects in materials and manufacture on the original purchase date for a period of ONE YEAR from that date. If within the warranty period it is determined that the product is defective (on the date of original purchase) due to inadequate materials or manufacture of device, ANDRA SOLUTIONS without charge for parts, will repair or (at the discretion of ANDRA SOLUTIONS) will replace the product or its defect. Parties subject to the terms and limitations below. ANDRA SOLUTIONS can replace defective products or parts with new or reconditioned products or parts. All replaced products and parts become the property of ANDRA SOLUTIONS.

CONDITIONS Warranty services will be provided only if the defective product is presented within the warranty period. ANDRA SOLUTIONS can reject the free warranty service if the product is not presented within this period. This warranty will not apply if the model name or serial number of the product has been altered, removed, removed, or illegible. To avoid data damage or loss / erasure, you must download any data before submitting your product for warranty service. This warranty does not cover transportation costs and risks associated with the transportation of your product to and from ANDRA SOLUTIONS.

This warranty covers only the hardware components of the product. It does not cover software (whether from ANDRA SOLUTIONS or others) for which an end-user license agreement is provided or is intended to apply or independent warranty / warranty statements or exclusions. This warranty does not cover: - misuse, including: • treatment resulting in physical, cosmetic or superficial damage or changes to the product; • failure to install or use the product for its normal purpose or in accordance with the installation or use instructions; • Failure to maintain the product in accordance with the instructions on proper maintenance; • installation or use of the product in a manner incompatible with the laws or technical or safety standards of the country where it is installed or used. – Programmes Virus infections or use of the product with software not provided with the product or incorrectly installed software - The condition or defects in the systems with which the product is used or incorporated, except other ANDRA SOLUTIONS products designed to be used with the product. - Use of the product with accessories, peripheral equipment and other products of a type, state and standard other than those prescribed by ANDRA SOLUTIONS. - Repair or attempted repair by people who are not approved by ANDRA SOLUTIONS - Adjustments or adaptations without the prior written consent of ANDRA SOLU-TIONS, which include: • updating the product beyond the specifications or characteristics described in the manual of instructions, or • modifications to the product to conform to national or local technical or safety standards in countries other than those for which the product was specifically designed and manufactured; negligence; accidents, fires, liquids, chemicals, other substances, floods, vibrations, excessive heat, inadequate ventilation, power surges, excessive or incorrect input voltage or supply, radiation, electrostatic discharge, including lighting, other external forces and impacts.

Exclusions and limitations, except as established above, ANDRA SOLUTIONS does not offer guarantees (express, implicit, legal or otherwise) with respect to the product or the software




that accompanies it or constitutes the quality, performance, precision, reliability, suitability for a particular or other purpose. If this exclusion is not permitted or fully permitted by applicable law, ANDRA SOLUTIONS excludes or limits its guarantees only to the maximum extent permitted by applicable law. Any warranty that cannot be entirely excluded will be limited (to the extent permitted by applicable law) to the duration of this Warranty. The only obligation of ANDRA SOLUTIONS under this Warranty is to repair or replace products subject to these Warranty terms and conditions. ANDRA SOLUTIONS is not responsible for any loss or damage related to products, services, this Warranty or otherwise, including - economic or intangible losses - the price paid for the product - loss of profits, income, data, enjoyment or use of the product or any associated products: indirect, incidental or consequential loss or damage. This applies if that loss or damage is related to: deterioration or non-functioning of the product or associated products through defects or lack of availability while with ANDRA SOLUTIONS, which caused downtime, loss of user time or interruption commercial inaccuracy of product output or damage to associated products or loss of software programs or removable data storage media, or virus infections and other causes. This applies to losses and damages under any legal theory, including negligence and other torts, breach of contract, express or implied warranty and strict liability (even when ANDRA SOLUTIONS has been advised of the possibility of such damages). When applicable law prohibits or limits these liability exclusions, ANDRA SOLUTIONS excludes or limits its liability only to the maximum extent permitted by applicable law. For example, some countries prohibit the exclusion or limitation of damages resulting from negligence, gross negligence, wilful misconduct, deception, and the like. The liability of ANDRA SOLUTIONS under this warranty will in no case exceed the price paid for the product, but if applicable law only allows higher limitations of liability, the higher limitations will apply. Your legal rights reserved. This warranty does not affect any legal rights you may have or rights that cannot be excluded or limited, or rights against the person from whom you purchased the product. You can assert any rights you have at your sole discretion.

Note: For the Spanish market, when an EQUIPMENT WITH A **"VERIFICACIÓN PRIMITIVA**" CER-TIFICATE is REQUESTED, issued by a control organism/governmental, and the equipment is returned. **This cost of the "VERIFICACIÓN PRIMITIVA" certificate is NOT included in any part of the guarantee**, as it is a document issued by third parties and expires. And the value expressly indicated in the commercial offer will not be returned under any circumstances.

## **USER AND INSTALLATION MANUAL**

Learn to use "Open Pro" in 5 minutes

## Dimension

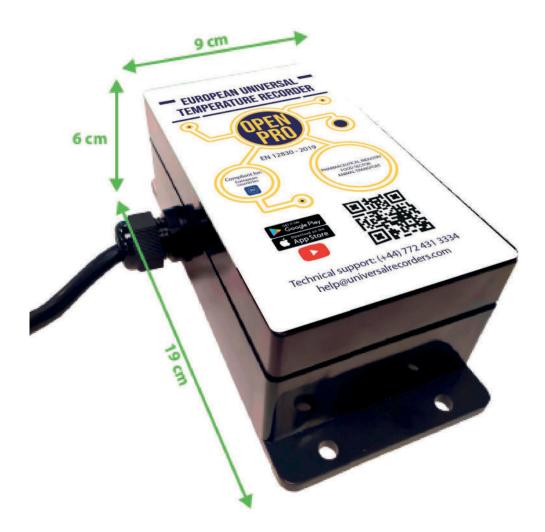

#### **Protection level**

IP 65 – Easy for installation in external environments



RED	 12 / 24 VDC
BLACK	 GND

**Red wire** - Positive - 12/24 V (do not use red + with wire) **Black wire** - Negative - Ground

# **Digital sensor**

Digital sensors has 2 wired: Red wire (data) and black wire (negative/ground)

# **Sensor 1 connection**

Blue dark + white wire from device - connect to red wire of sensor

# **Sensor 2 connection**

Green wire from device - connect to red wire of sensor 2

# Sensor 3 (optional)

Green + white wire from device - connect to red wire of sensor 3

# Sensor 4 connection (optional)

Blue dark wire from device - connect to red wire of sensor 4 Black + white wire from device - connect to black wire of all sensors

# **Digital inputs**

YELLOW	 IGNITION
BROWN	 FRIGO MACHINE
PINK	 DOOR 1
CYAN	 DOOR 2



# Ignition

**Yellow wire** - Detects ON if has voltage. If not connected or connected to ground, this input will be unvaliable

# Frigo machine detection

**Brown wire** - Detects ON if has voltage. If not connected or connected to ground, this input will be unvaliable

## Door 1

**Pink wire** - Detects ON if has voltage. If not connected or connected to ground, this input will be unvaliable

## Door 2

**Cyan wire** - Detects ON if has voltage. If not connected or connected to ground, this input will be unvaliable

# **Digital outputs**




# **External warning**

Purple wire - Connect to rele by pin 86. Set rele in on/off state

# **Remote control**


Grey wire - Connect to rele by pin 86. Set rele in on/off state

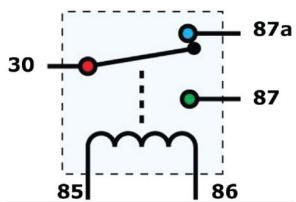



## **Communication RS-232**

**White wire** - Transmision (TX) - Connect to RXD from external device **Orange wire** - Reception (RX) - Connect to TXD from external device **GND** - Connect to the ground

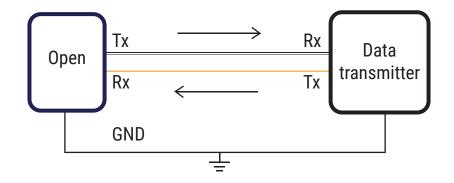

#### **Transmission configuration**

Parameter	Value
Baudrate	115200
Data bits	8
Parity	None
Stop bits	1

### **RS-232 Commands**

AT+TEMP	Returns in five lines the T1, T2, T3, T4 probe temperatures and OK, respectively
AT+STATUS	Returns in two lines the device Status register (2-byte in HEX) and OK, respectively. Status 2-byte register format example: 0x00B5 -> 000000010110101 - Bit 0: Input 1 (Ignition ON) - Bit 1: Input 2 (Engine ON) - Bit 2: Input 3 (Door open) - Bit 3: Input 3 (User input) - Bit 4: Input 4 (User input) - Bit 5: T1 High Alarm



## **Complete connection diagram**

RED	 12 / 24 VDC
BLACK	 GND
WHITE+BLUE	 SENSOR 1
GREEN	 SENSOR 2
WHITE+GREEN	 SENSOR 3
DARK BLUE	 SENSOR 4
YELLOW	 IGNITION
BROWN	 FRIGO MACHINE *
PINK	 DOOR 1 *
CYAN	 DOOR 2 *
PURPLE	 EXTERNAL WARNING *
GREY	 REMOTE CONTROL*
WHITE	ТХ
ORANGE	 RX
WHITE+BLACK	 GND
WHITW+RED	 +5V OUTPUT

\*Inputs receive signal ON by positive \*Outputs need rele





### **Smartphone App Android**

Download Andra Telematics in Google Play or App Store




**Real time display:** In this display you can see temperature and state from inputs and outputs in real time.



#### Principal display


**Stored records screen**: On this screen you can select download storage records in the internal memory of the device. You can select date range and download the records. You look like a list:

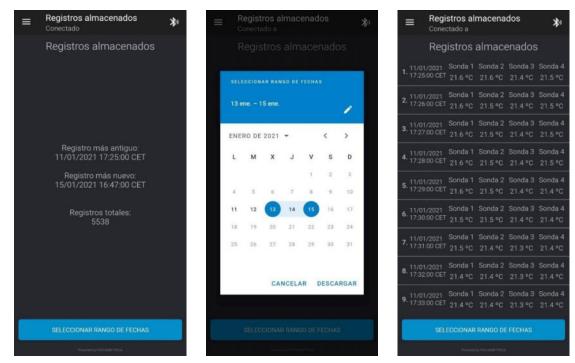

Stored records screen



**Configuration display**: You can control the device in this screen. You need password that you received into your invoice. All changes will be recorder in events LOG

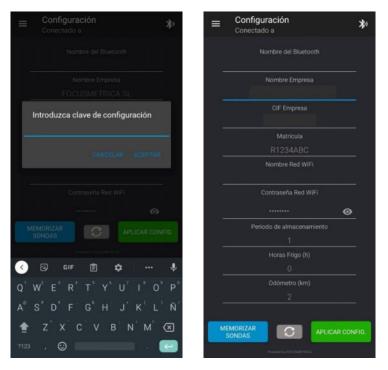

#### Configuration display

Events Log screen: You can watch all configuration changes that the device was received.

E Log de eventos Conectado Sonectado Sonecado Sonectado Sonectado Sonectado S				
Log de eventos				
1. 11/01/2021 SN 17:23:28 CET		del Dispositivo 710004		
2. 11/01/2021 17:23:28 CET	Periodo de al	macenamiento 1 min		
3. 11/01/2021 17:23:30 CET		mbre Empresa		
4. 11/01/2021 17:23:31 CET		e del Bluetooth		
5. 11/01/2021 17:23:31 CET		CIF Empresa		
6. 11/01/2021 17:23:31 CET		Matrícula R1234ABC		
7. 11/01/2021 17.23:47 CET		ID Sonda 1 C1D3557		
8. 11/01/2021 17:23:48 CET		ID Sonda 2 C1D3171		
9. 11/01/2021 17:23:48 CET		ID Sonda 3 C1D0879		
10. 11/01/2021 17:23:48 CET		ID Sonda 4 C1D78F0		
Printered by FOSTIMMETHICS				

Events log



**EN-12830 data screen information**: Show all relevant information from device. Serial number, Data, software version and CRC, Sensor temperature identification:



EN-12830 data screen information

